


rapid.



Fibreglass Door

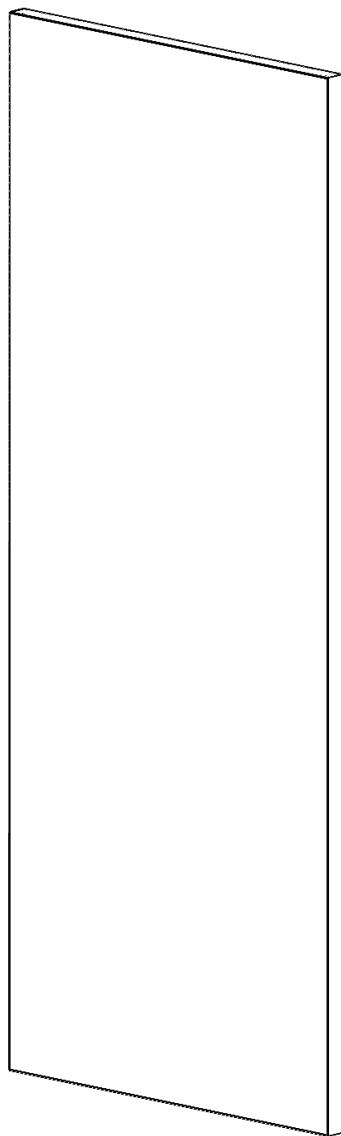

ASSEMBLY INSTRUCTIONS

401085

DIMENSIONS

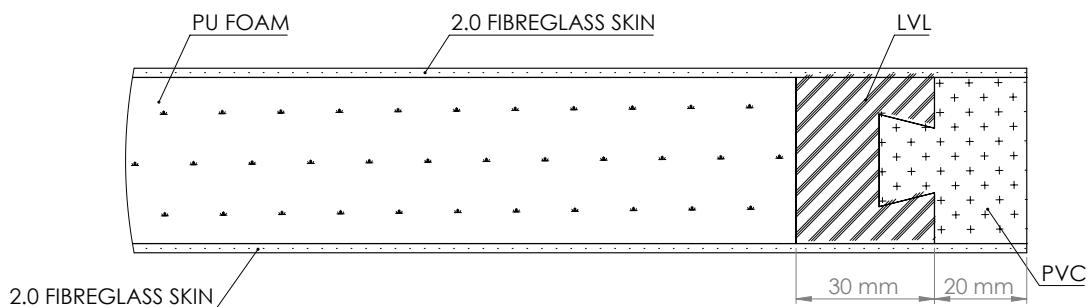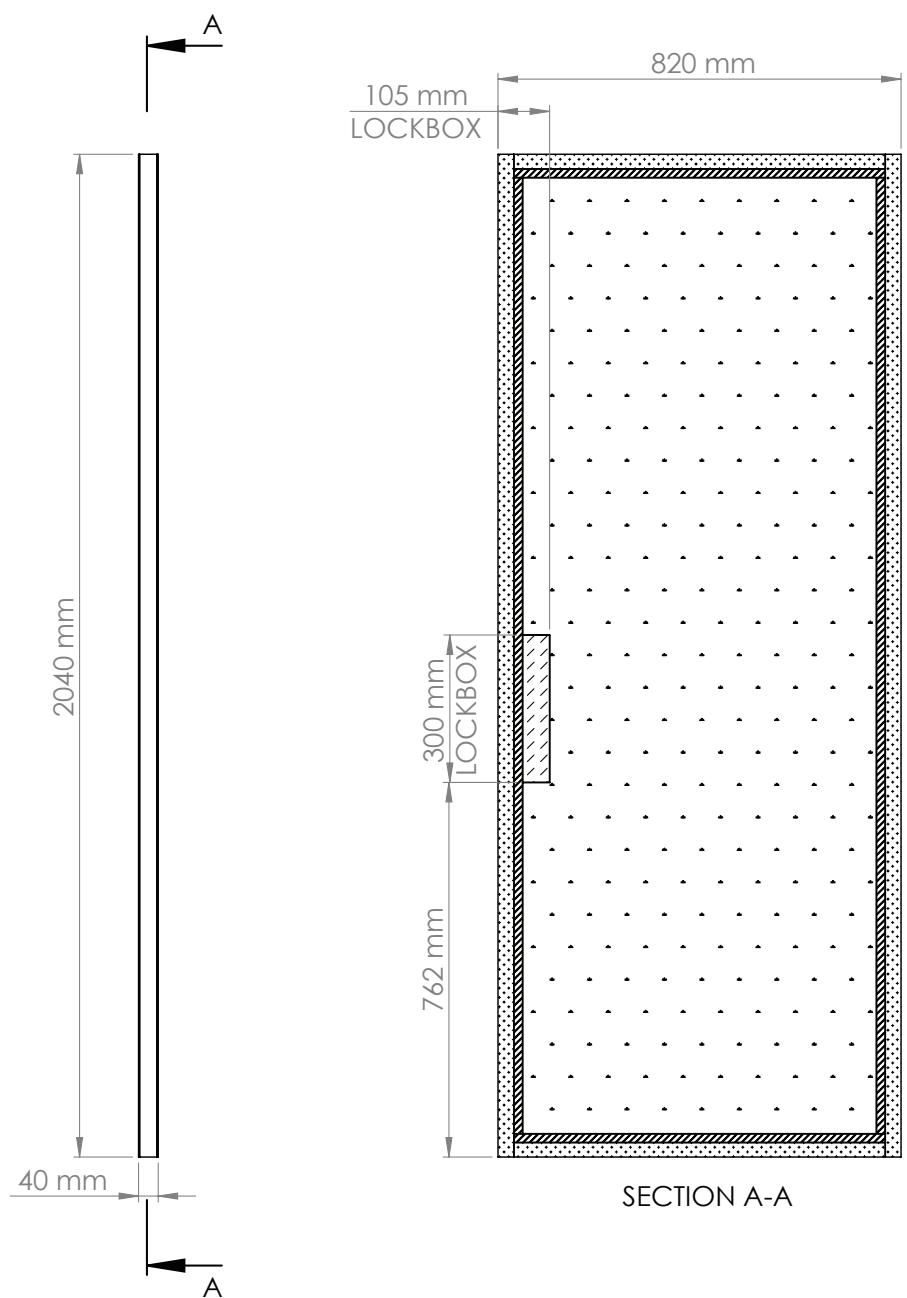


rapid.

IMPORTANT



Door designed for garages, laundries and side entrances.

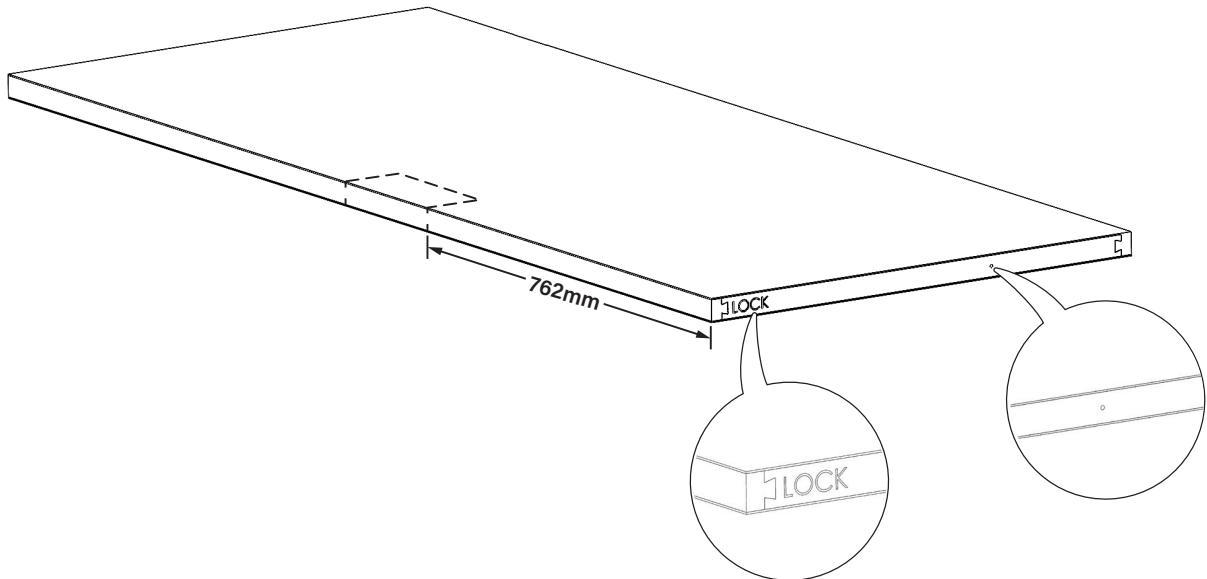


- * Check the bottom of the door for the 'LOCK' stamp to identify the lockbox side.
- * Bottom end with hole indicates the hinge side.

rapid.

PARTS

r1
1x

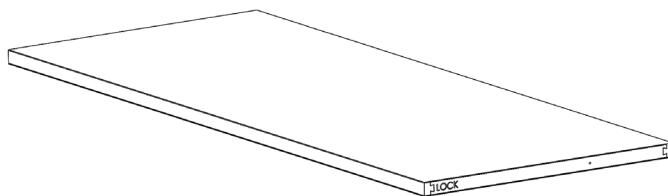

Tools you'll need —



Pencil




Screwdriver



Measuring Tape



Square Combination Ruler



Drill



Chisel



Hammer



Power Planer
(only if trimming needed)




Router

* Door hardware not included.

rapid.

ASSEMBLY INSTRUCTIONS

1

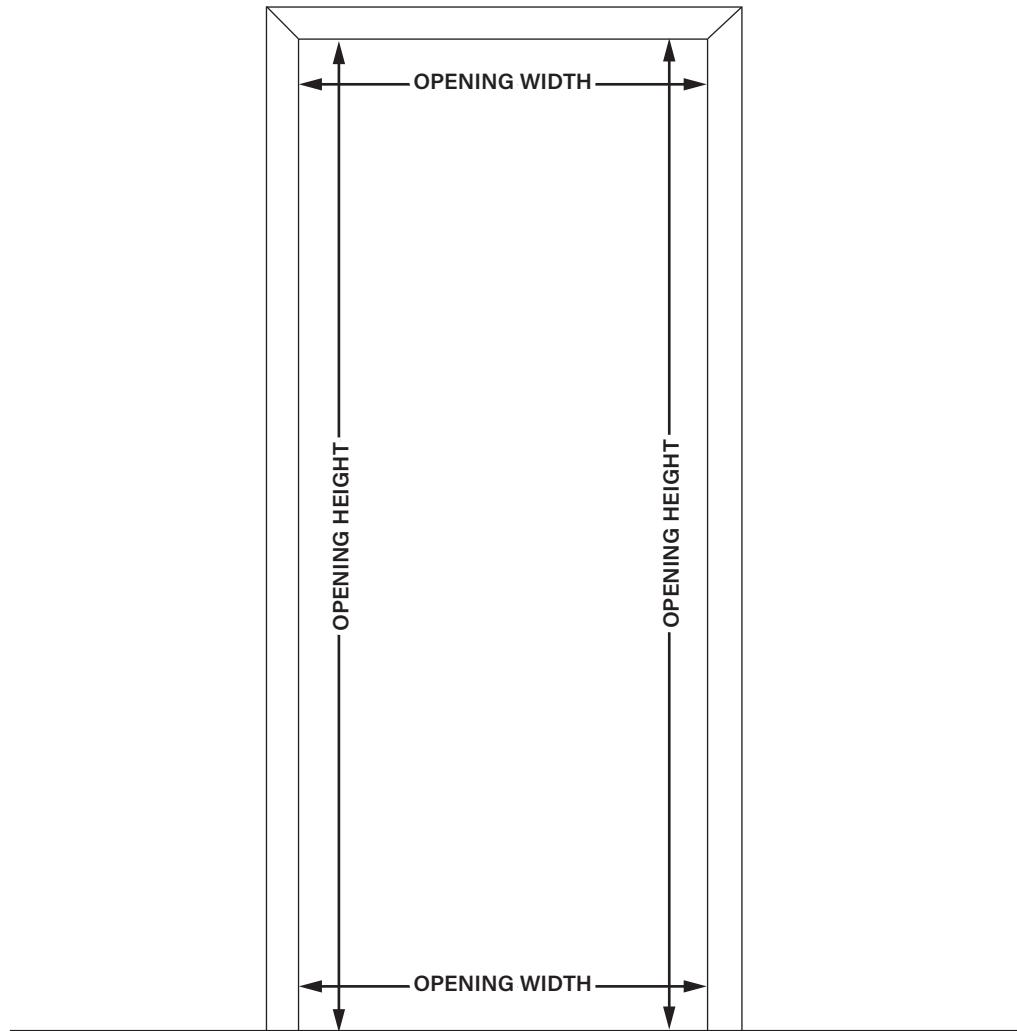


* Measure door opening before installing.

rapid.

ASSEMBLY INSTRUCTIONS

2

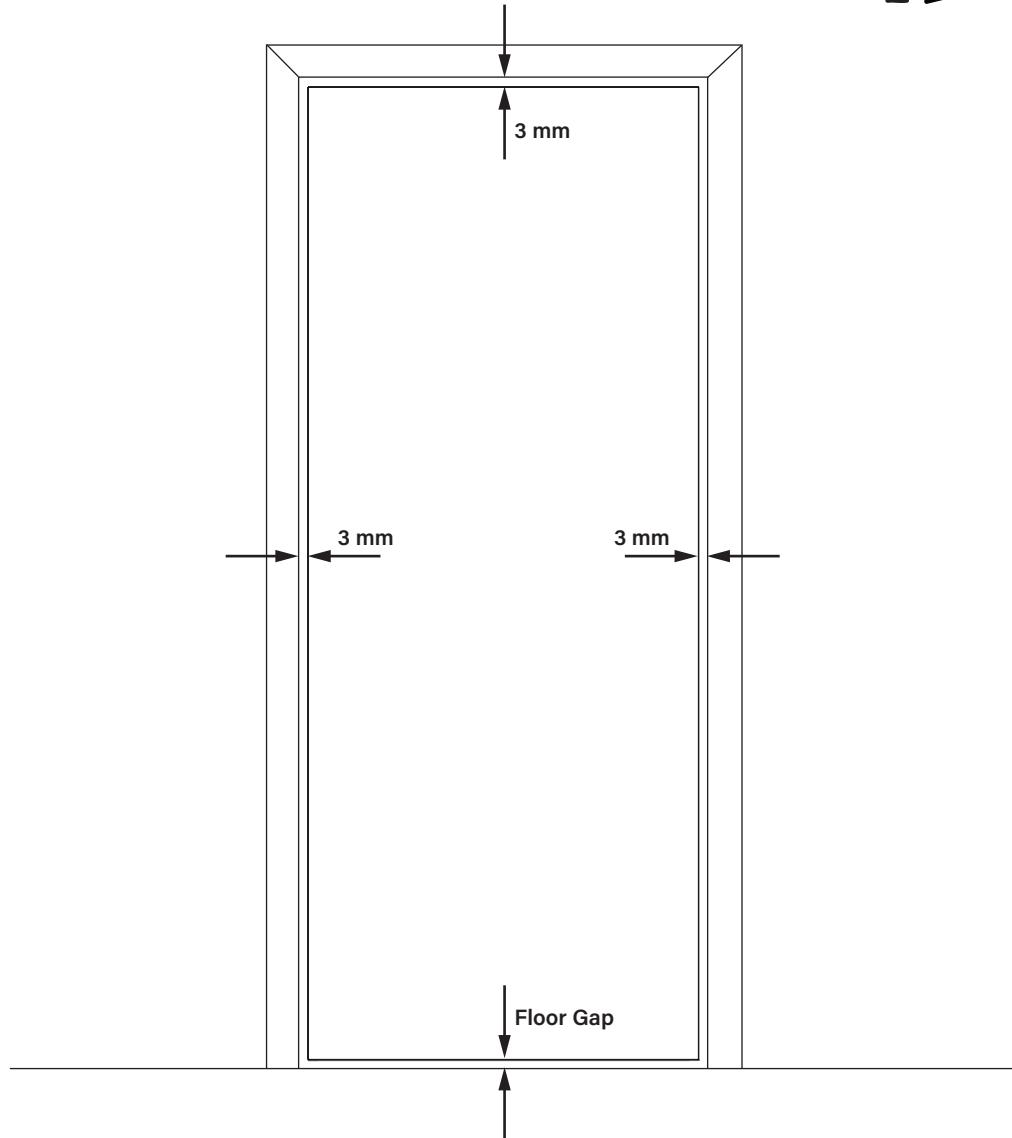

i DOOR WIDTH = opening width - 6 mm (allowing 3mm clearance on each side)
DOOR HEIGHT = opening height - 3 mm (top clearance) - floor gap (varies by floor type)

i Double-check door orientation before trimming. The bottom corner with 'LOCK' stamp indicates side with the lockbox.

Maximum 10 mm can be trimmed from any edge of the door. Trim evenly on both sides.


* Recommended clearance: 3 mm between door and frame.

* Refer to painting instructions on our website for sealing doors.


rapid.

ASSEMBLY INSTRUCTIONS


3

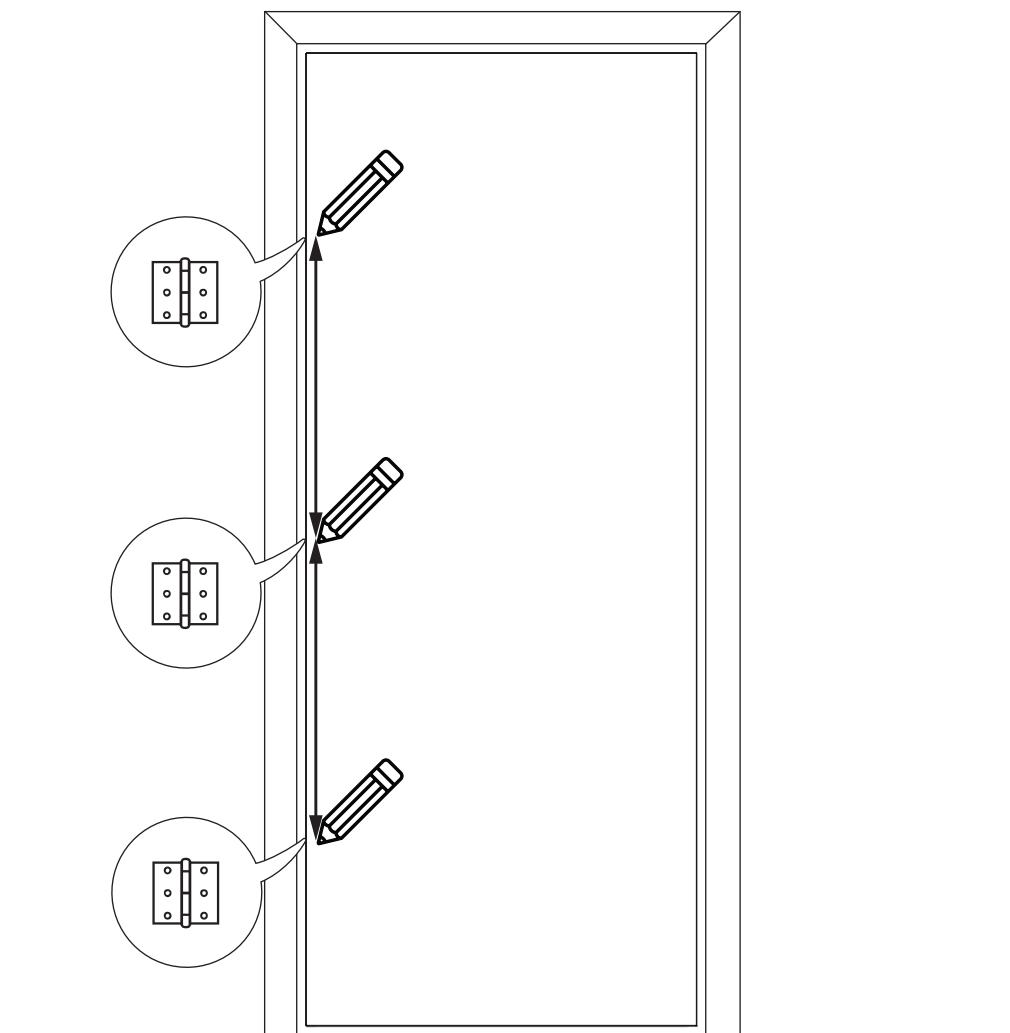

Step 1: Mark around hinge edge with pencil.

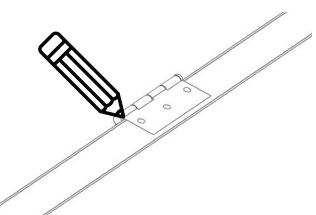

Step 2: Chisel or router hinge area making sure not to cut deeper than hinge thickness.

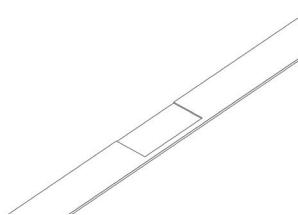



* Recommended to use 3 hinges.

* Take extra care when routing or chiselling, sand before installing or painting.


rapid.

ASSEMBLY INSTRUCTIONS

4

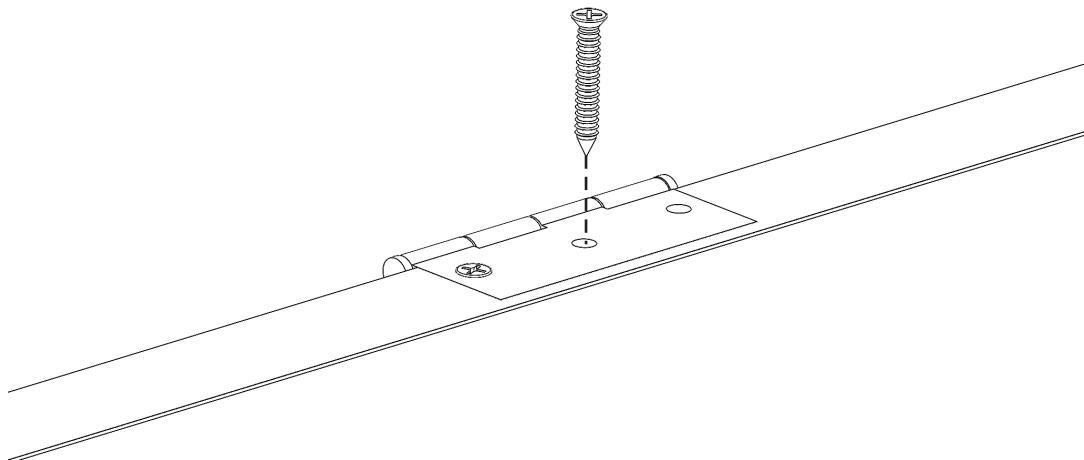

* Use 50-60mm length timber screws

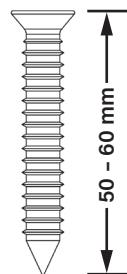


* Pre-drill hole for screws.

rapid.

ASSEMBLY INSTRUCTIONS

5

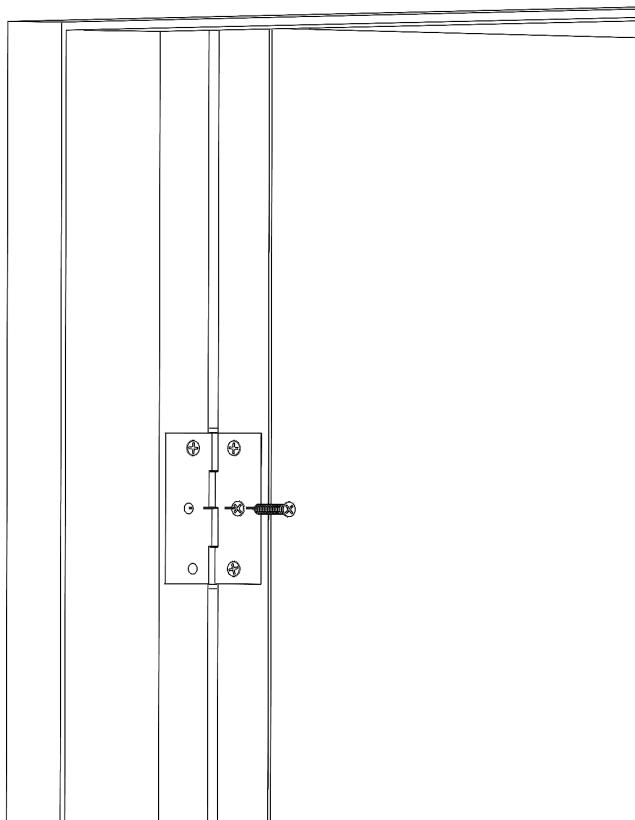


- * Make sure door opens and closes freely.
- * Pre-drill hole for screws.

rapid.

ASSEMBLY INSTRUCTIONS


6

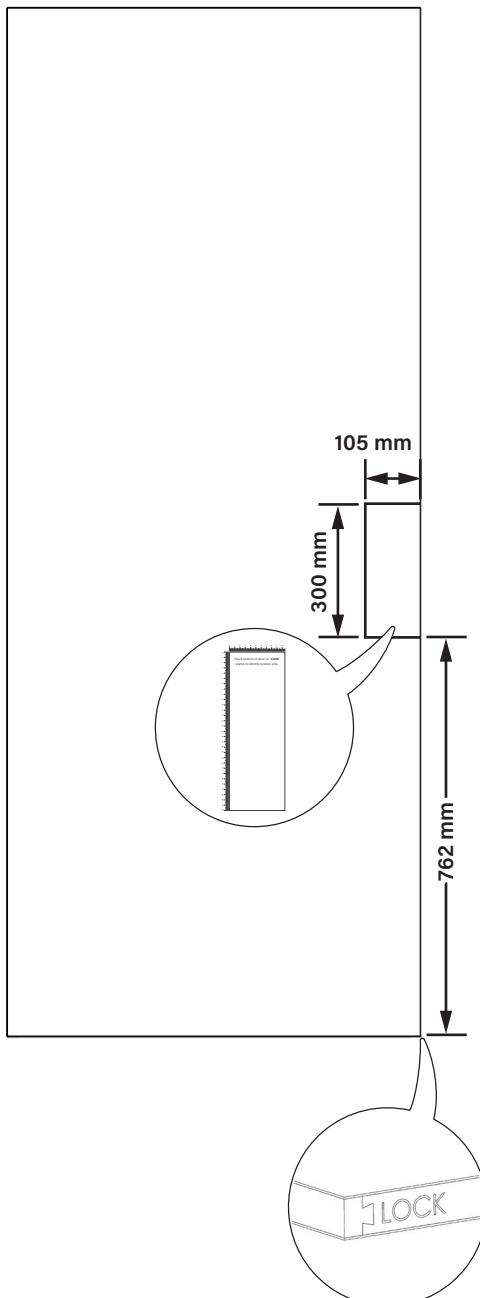

- i** Cut out the lockbox template from packaging.

rapid.

FIBREGLASS DOOR
820x2040x40mm

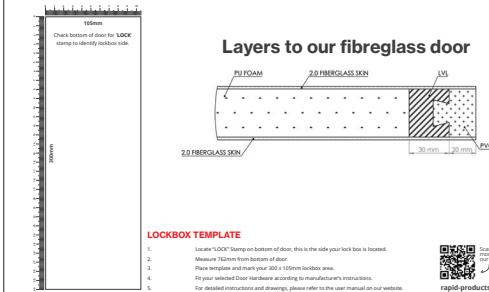


- * Lockbox template image in the user manual is not actual size. Use the template provided in packaging, or use tape measure.

rapid.

ASSEMBLY INSTRUCTIONS

7

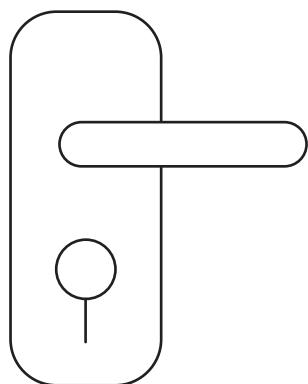

- * Select your desired door hardware to suit the lockbox area, then install according to the manufacturer's instructions.

rapid.

IMPORTANT USAGE NOTICE



Door may be heavier than some timber doors, it is important to lift safely to avoid any damage to yourself or door.

Can be used as internal door in wet areas. Please refer to QR code for correct prepping and painting of doors depending on placement.

Hinges can be placed in desired locations, recommended to chisel or route out rebate carefully.

Use 50-60mm length timber screws to hang hinges to fit securely into the door.

Trim doors no more than 10 mm on any side.

Make sure to inspect door prior to installation for the correct size and any defects.

Warranty may be voided if proper prep and care is not taken. Please refer to our warranty.

For more information on compliance with bushfire building requirements, please refer to QR code.



Always wear mask and safety goggles when trimming, chiselling, routing, or drilling the door to avoid inhaling dust and to protect eyes.



Scan to learn
more about
our doors.

rapid-products.com.au

rapid.